


Procedure for upgrading COMPACT S / ST

➤ Upgrading from PC to Meter with RS232:


Needed material:

- FinderTools_com1.ht or FinderTools_com2.ht
- Last firmware version.
- PC with serial port, COM_1 or COM_2.
- Operative System Windows 98 or XP.
- DB9 female - USB (Pin to pin)

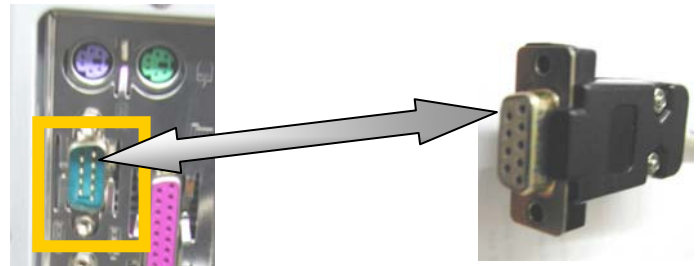



Software upgrading:


1. Connect the serial cable between the PC and the meter (it must be switched off).
2. Run the file FinderTools_com1.ht or FinderTools_com2.ht depending on the COM port that is being used. Run "FinderTools_com1.ht" when connecting RS232 cable to COM1, or "FinderTools_com2.ht" when connecting RS232 cable to COM2.

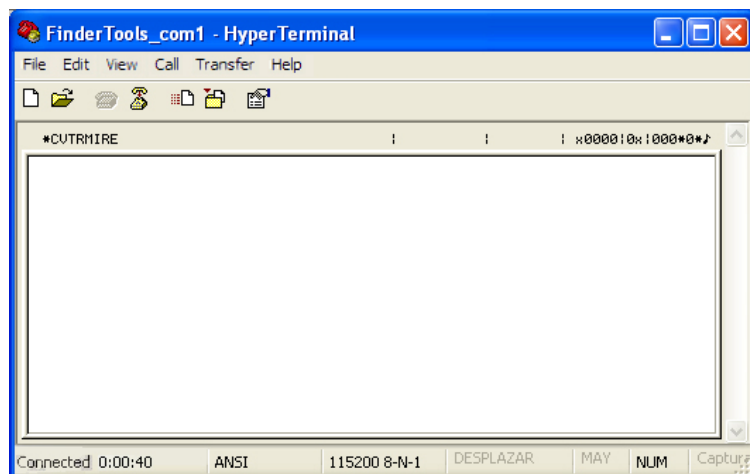


3. Keep pressing the ESC key in the keyboard when turning on the field meter, and the following picture will be shown on the PC, then you can stop pressing the ESC key.

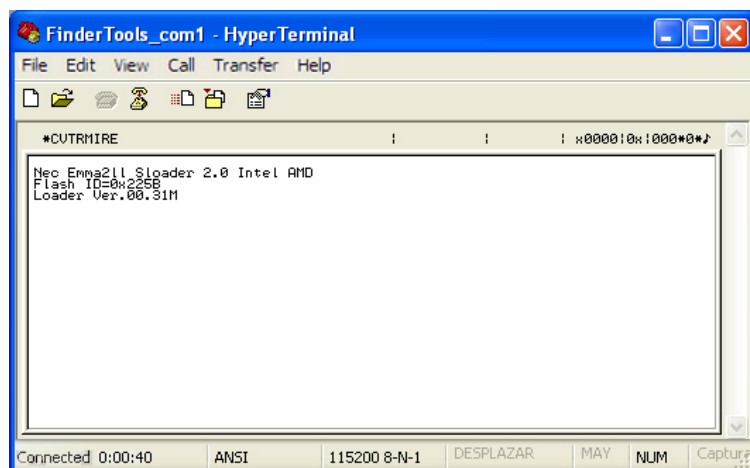

4. Select the icon TRANSFER  from the menu, the following window will be shown. Press *Browse* button and select the updating file .UP

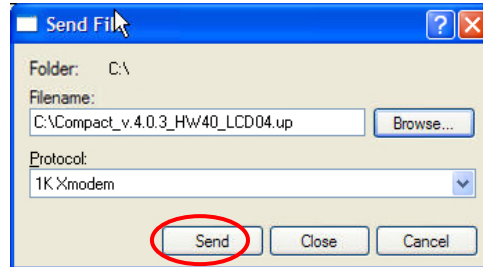

5. Press SEND button after you select the file. Then press the DOWN key on keyboard of the field meter and the updating will start.

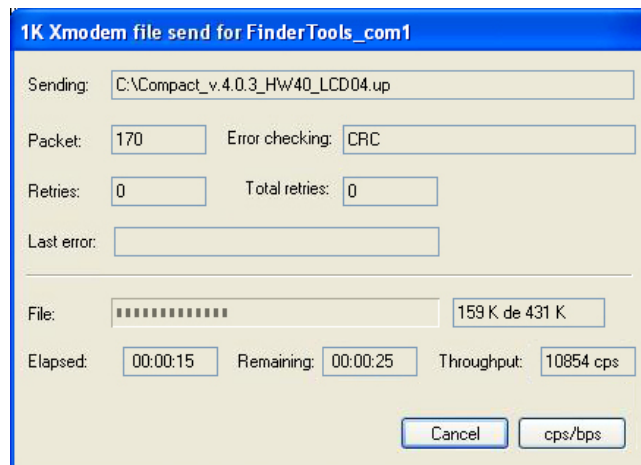

6. As the updating has finished the following picture will appear. Then the field strength meter has to be rebooted and the RS232 cable has to be disconnected from the PC and field meter.

